



PROFESSIONAL APPLICATION GUIDE



Use **Maxiclean** to clean joint before applying silicone.
Joint must be free of any contaminants eg: Dust, Moisture.

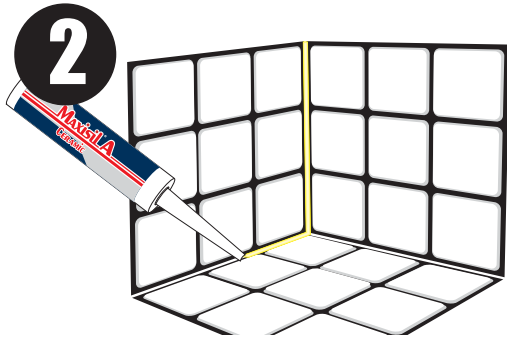


Cut the tip off tube square and the nozzle at 45°. Attach the nozzle and place the tube in gun. Place backer rods in joints, where required, to avoid excess wastage of silicone and to ensure silicone adheres to the two working surfaces. On both horizontal and vertical joints, be sure to trail the silicone behind the nozzle and fill the joint completely. With vertical joints start at the bottom working upwards. Apply only as much silicone as can be worked before skin form - usually up to 10 minutes, depending on the temperature.

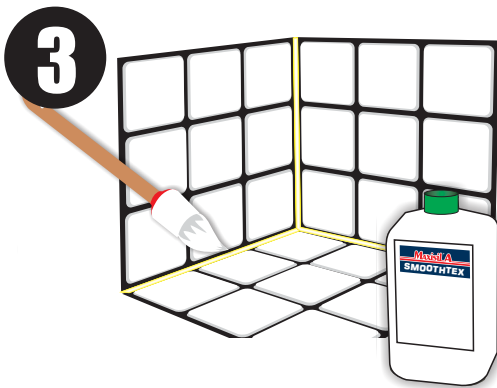


Using the **Smoothtex brush**, with minimum pressure, apply generous amounts of **Smoothtex** leaving the last 5cm free of **Smoothtex**.
This allows the next area of silicone to adhere to the last if required.

*Note: **Smoothtex** cannot come into contact with surface before silicone is applied.

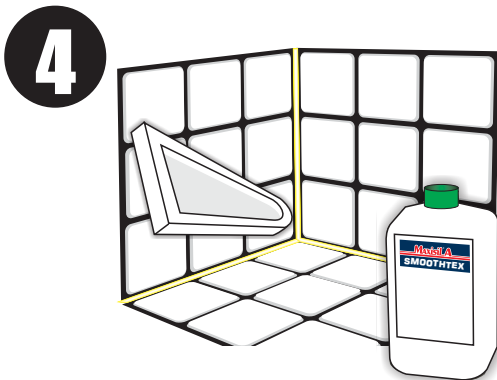

Use the applicator to remove excess silicone and form a smooth and tidy joint. Be sure to frequently dip the applicator in the **Smoothtex**. By holding the applicator at different angles it can be used to remove various amounts of silicone needed to achieve the joint size required. Dispose of excess silicone thoughtfully.

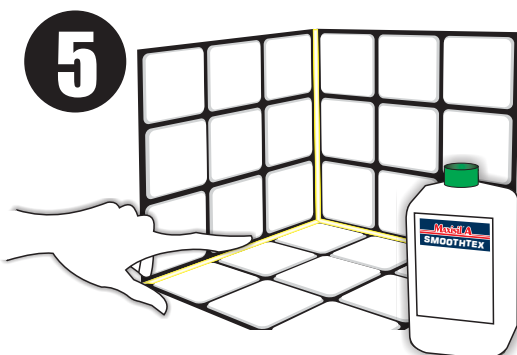

For a final touch-up use your finger, dipped in **Smoothtex**, with minimum pressure to smooth over joint ..

*Note: Excess **Smoothtex** should be removed from tiles .

To maintain a healthy silicone joint , please use **Maxisil Mould Remover** regularly.